Offset & Pattern Set

600-790 1/2" Shank

Simply changing bearings on these bits allows you to adjust rabbets or offsets from 1/16" to 1/2" in 1/16" increments or make flush trim cuts Adjusting the height of the bit will change the vertical dimension of the cut. Please assemble the bits and bearings as shown in these illustrations. Please note: the bearing must be secure, but take care not to overtighten the screw.

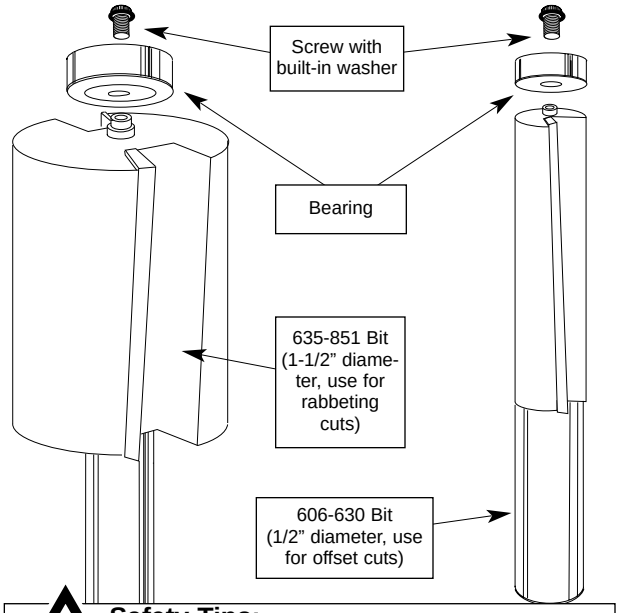
Screw with built-in washer
Bearing
635-851 Bit (1-1/2" diameter, use for rabbeting cuts)
606-630 Bit (1/2" diameter, use for offset cuts)

Safety Tips:

- Read and follow all instructions and safety procedures that came with your router and router bits.
- Always unplug your router before changing bearings on these bits.
- Always wear ear, eye & breathing protection when using power tools.
- Don't bottom out the bit in the collet. The end of the shank should be about 1/8" from the bottom of the collet.

© 1999 Jesada Tools
310 Mears Blvd. Oldsmar, FL 34677 1-800-531-5559